

K-HRV150 Extension Kit – Installation Instructions

Part Code: K-HRV150-EXT

Kair Ventilation
1st Floor, 9-11, Sidcup High Street, Sidcup, Kent, DA14 6EN

Fax: 08451 66 22 50
Web: www.kair.co.uk
Email: info@kair.co.uk
Phone: 08451 66 22 40



KIT CONSISTS OF

1 X OUTER TUBE

1 X INNER TUBE

1 X RUBBER SEAL

1 X TERRACOTTA COWL

(Packed in the K-HRV150)



TOOLS REQUIRED

NOT INCLUDED...

TAPE MEASURE, SAW OR HACKSAW,

CORE DRILL + CORE CUTTER AND A

HEAT RECOVERY UNIT K-HRV150

1.


REMOVE RUBBER SEAL

IMPORTANT

KEEP IN A SAFE PLACE AS YOU WILL
NEED THIS LATER.



1.

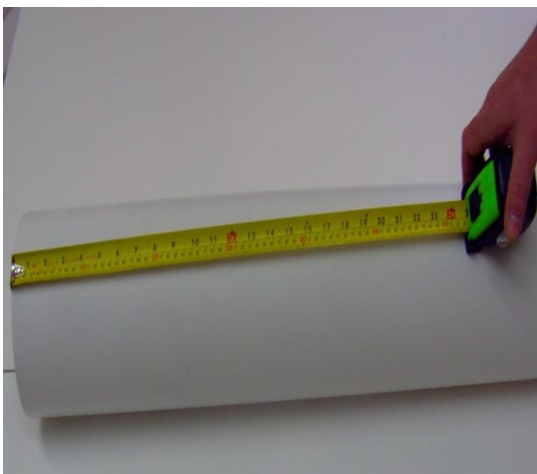

2.

2.

Measure the inner tube to required
length, remembering

That this is the end where you
removed the rubber seal from

K-HRV150 Extension Kit – Installation Instructions

Part Code: K-HRV150-EXT

3.

After measuring, cut the inner tube to the required length

3.




4.

4.


Replace the rubber seal (REMOVED EARLIER) on to the cut end of your inner tube. Now slide the inner tube gently over the motor of the K-HRV150 heat recovery unit – AS SHOWN IN FIGURE 4



5a

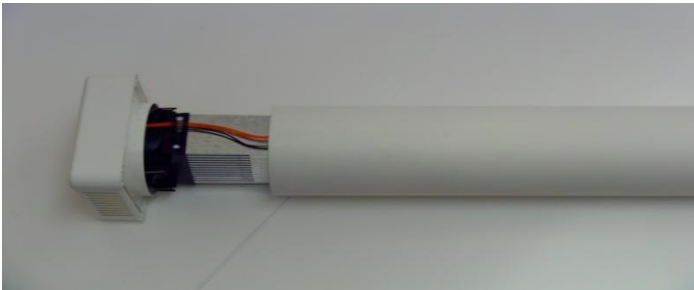

5b

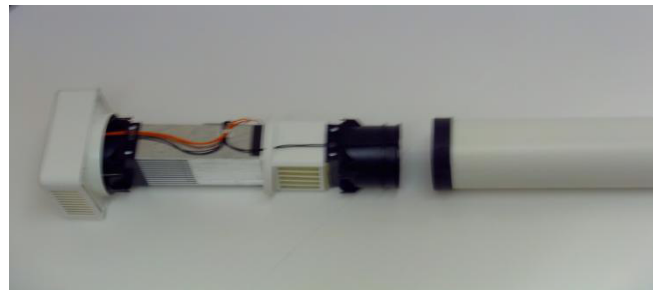

5c



See Fig 5a, 5b & 5c


Next slide the outer tube OVER THE INNER TUBE and mark off the length as you need to cut this to the same length as the inner tube.

K-HRV150 Extension Kit – Installation Instructions


Part Code: K-HRV150-EXT

Kair Ventilation
1st Floor, 9-11, Sidcup High Street, Sidcup, Kent, DA14 6EN

Fax: 08451 66 22 50
Web: www.kair.co.uk
Email: info@kair.co.uk
Phone: 08451 66 22 40

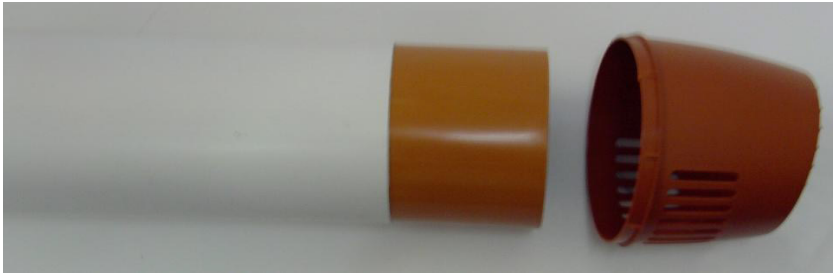

6a

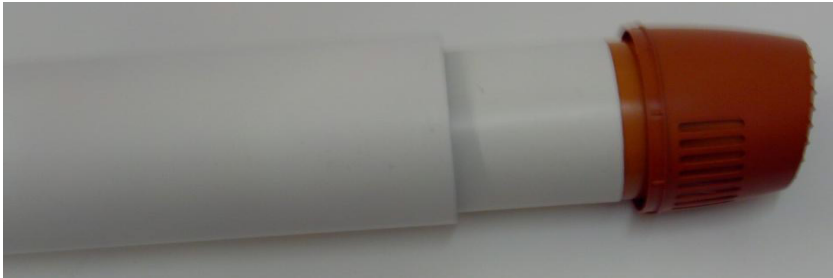

6b



6c

Attach outside cowl to the end of the INNER AND OUTER TUBE and SECURE IN PLACE with DUCT TAPE, MASTIC OR PLASTIC DUCTING ADHESIVE so it doesn't become detached WHEN IN POSITION OUTSIDE THE PROPERTY. AS IN FIG 1, FIG 2 & FIG 3